


4. Disassembling guide


Remove 13 screws on top cover and rear panel.




Remove the remote panel and 3 control cables.

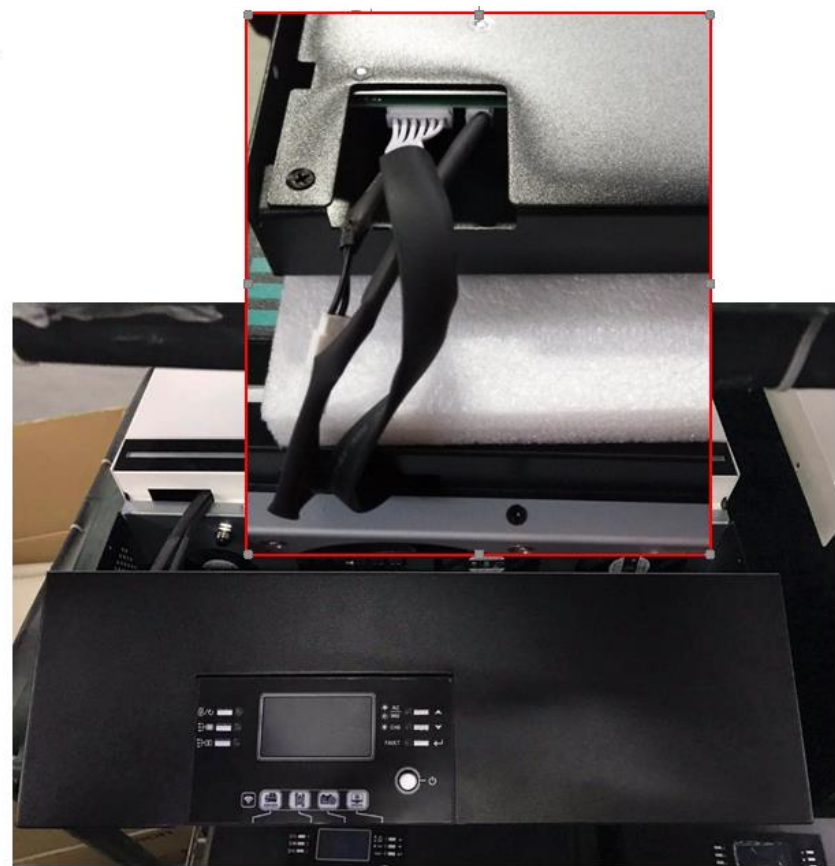


Remove 4 screws and 4 nuts on the SCR Board.

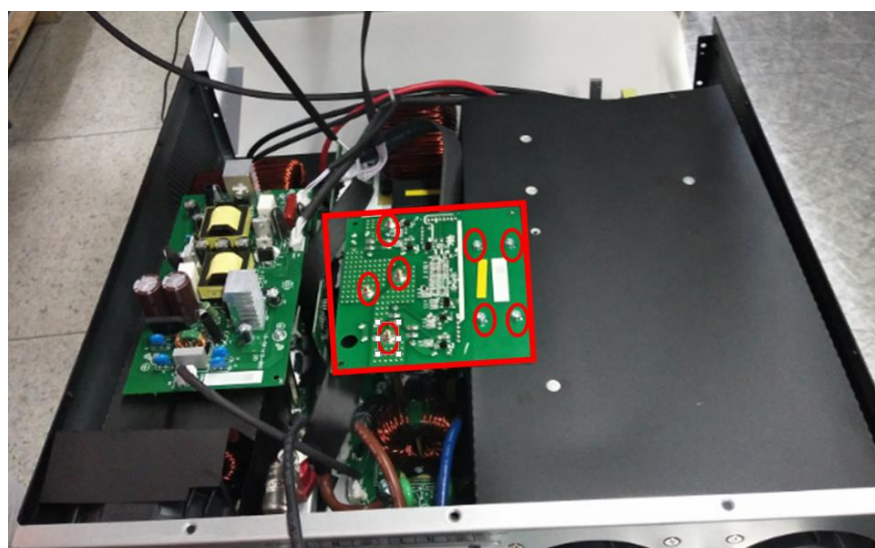


Remove 5 screws on the SPS Board ,and 4 plastic screws of wind pipeline.

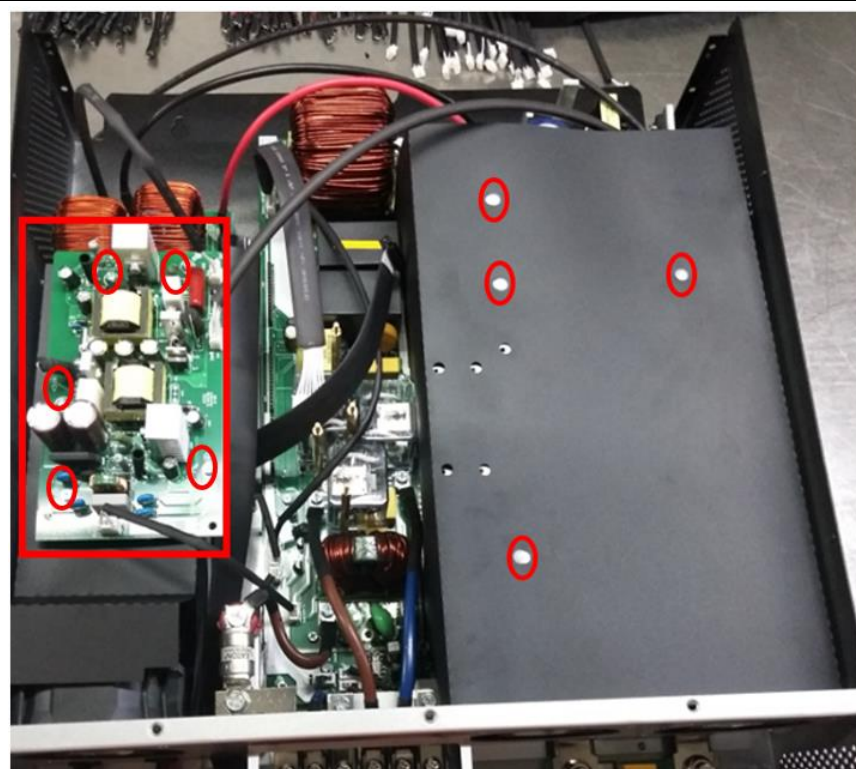

Remove 2 plastic screws of wind pipeline and 2 screws beside the control board. Take out the control board.

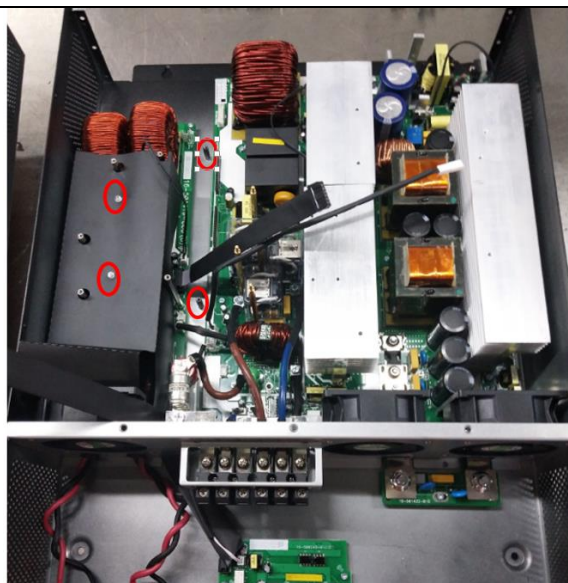

Remove I/P and O/P cables.

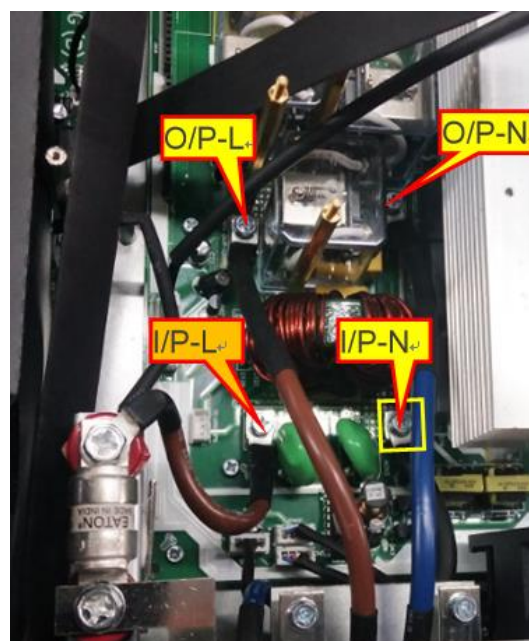


Remove the fan cables.





Remove 4 screws beside the fan frame.




Remove PV IN cable.

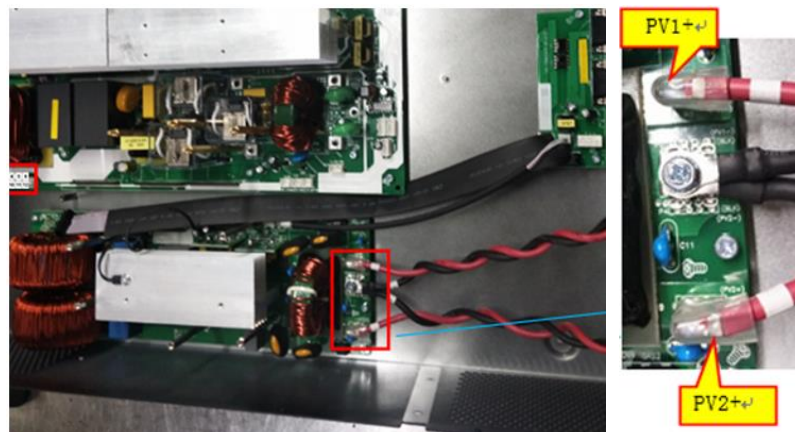

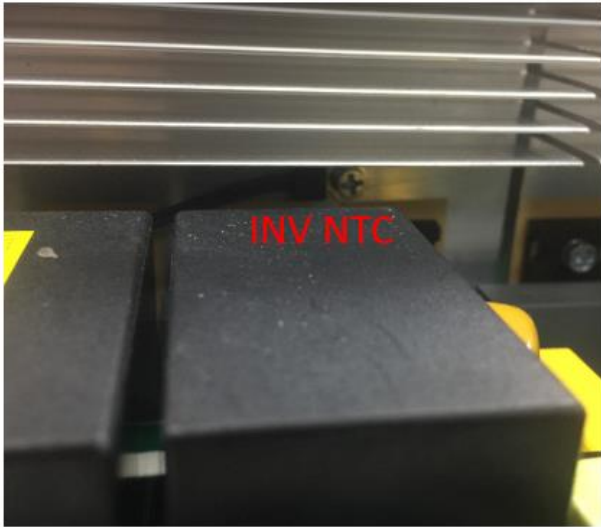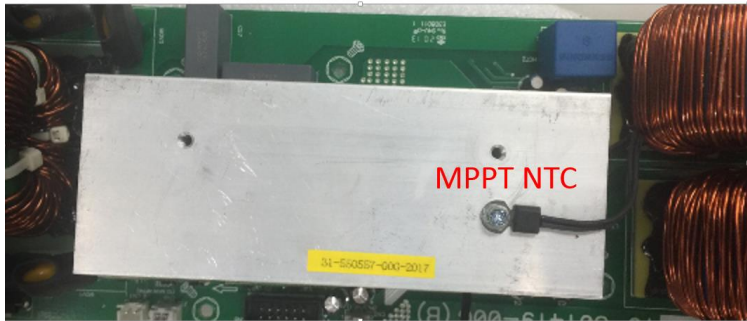维修手册					
专案名称:					
专案编号:	P1911061	修订版次:	00	PAGE	
<div> <div> Remove MPPT NTC, Converter NTC and INV NTC. </div> <div>  </div> <div>  </div> <div>  </div> </div>					
Remove 22 screws on main board and					

MPPT board.
Remove 5
copper pillars
on MPPT
board.
Take out the
main board and
MPPT board.

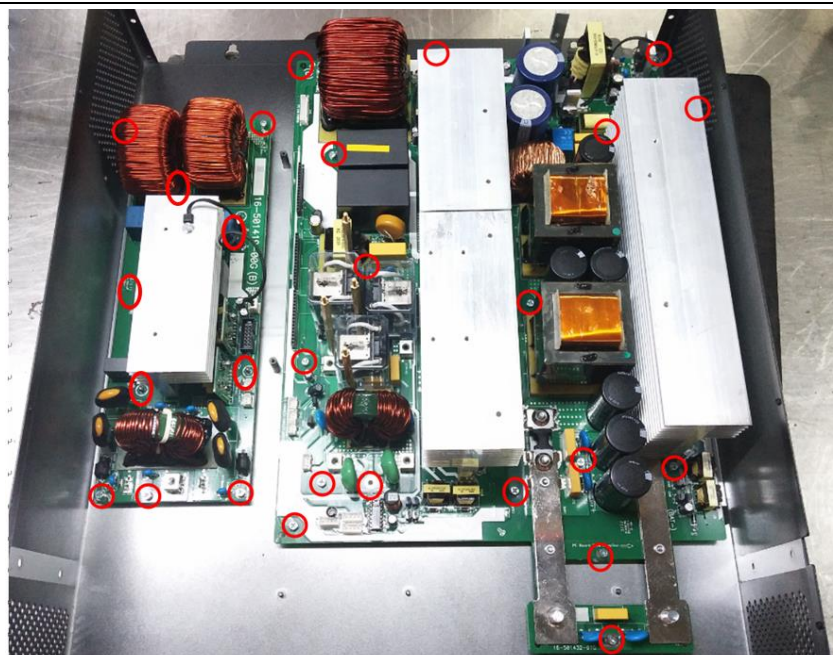

Total wiring diagram:

Note: Wrong connection of wires may cause inverter damage!

Please connect wires with care!

